

Archbishop's Palace hall organ of Veszprém/Hungary, I/10

Stop list

Manual (C-g''')

bass (C-h ^o)		diskant (c'-g''')	
1. Coppel	8'	Coppel	8'
2. Principal	4'	Principal	4'
3. Flauta	4'	Flauta	4'
4. Nasat	2 ² / ₃ '	Nasat	2 ² / ₃ '
5. Waldflöte	2'	Waldflöte	2'
6. Tertia	1 ³ / ₅ '	Tertia	1 ³ / ₅ '
7. Mixtura II - III			
8. Regal	8'	Regal	8'

Pedal (C-g')

9. Subbass	16'
10. Gedeckt bass	8' (komb. with stop 9.)